


1

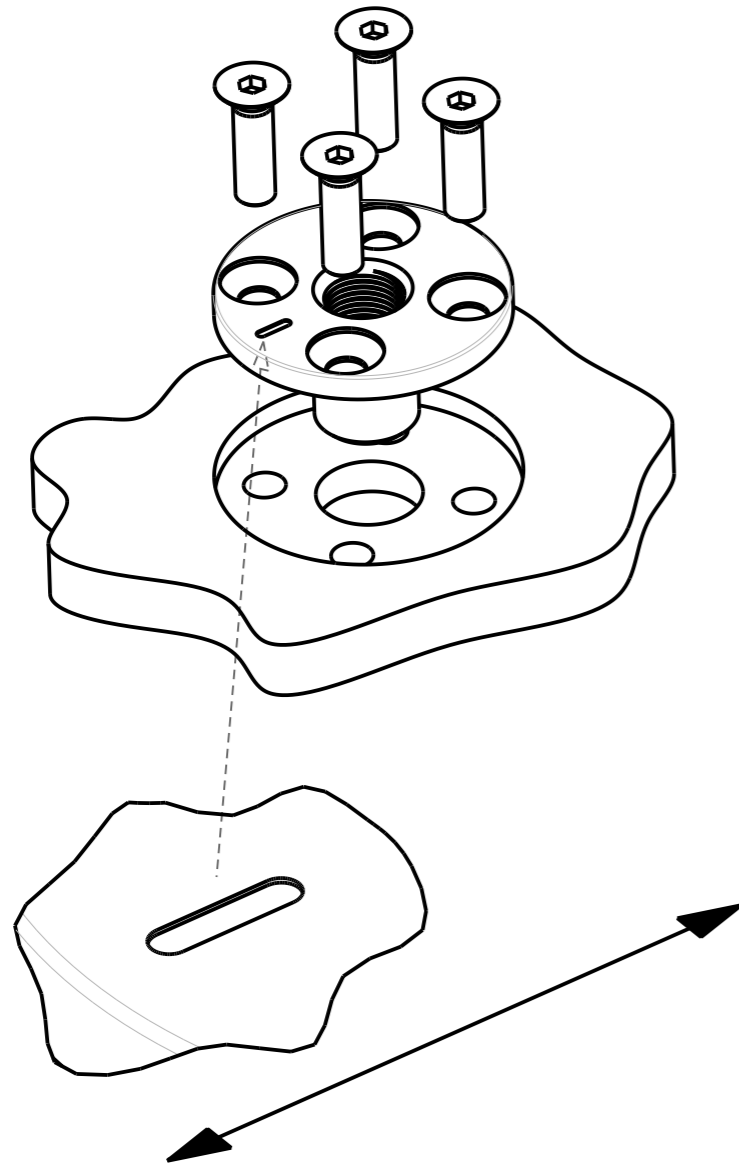


ALIGN BASE TO LOAD DIRECTION
USING LOOP DIRECTION INDICATOR

2



SCREW BLOCK & PLATE DOWN
FULLY - LOOP ORIENTATION WILL NOW
MATCH STAMPED BASE INDICATOR

3

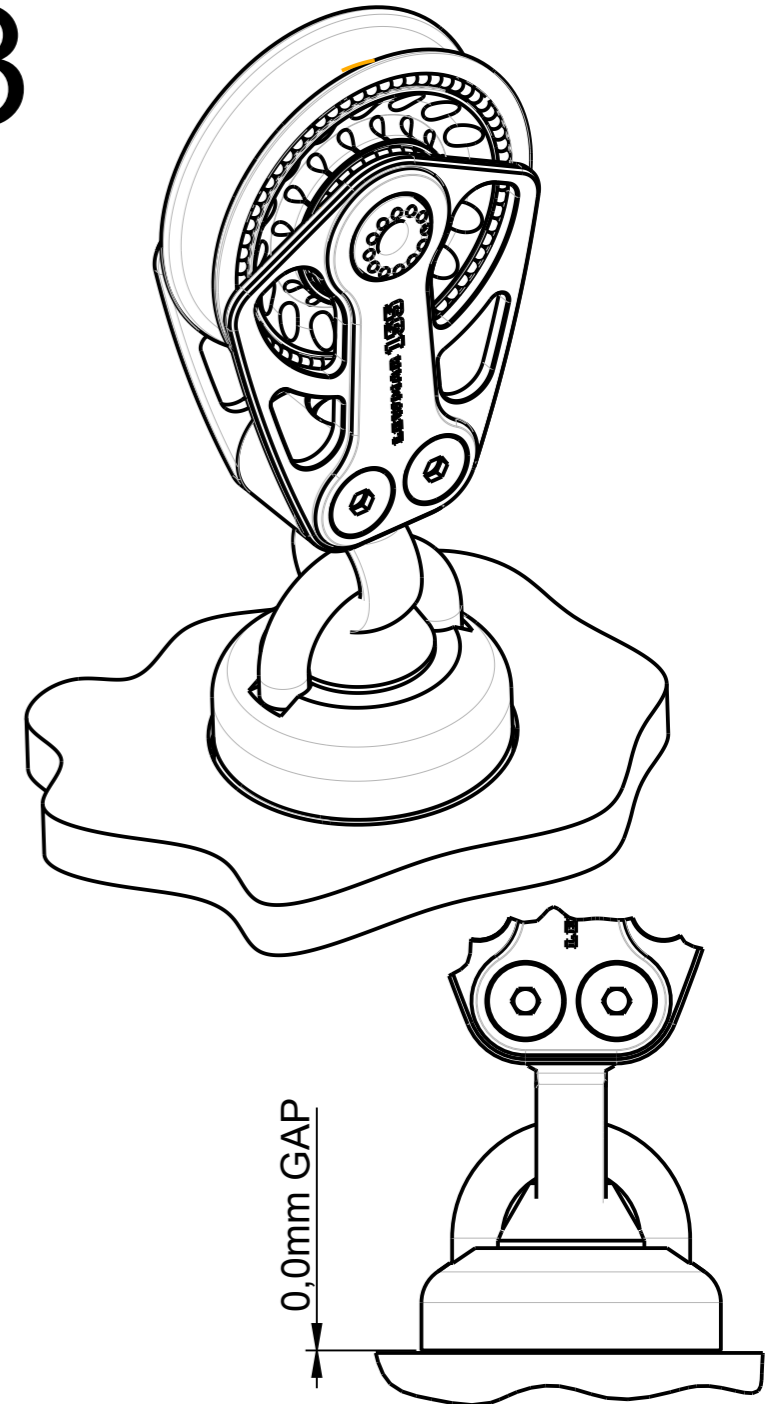

BLOCK & UPPER PLATE FITTED

SCREW DOWN FULLY UNTIL
MATING PARTS CONTACT
- DO NOT OVERTIGHTEN -

NOTE - IF BASE NOT SCREWED DOWN
FULLY THREAD MAY BEND UNDER LOAD

LEWMAR

Unauthorised use, manufacture or reproduction
In whole or in part is prohibited

Part Number :

Saved as :

SCREW PAD EYE FITTING

Date: 05-Nov-13

Issue: A

Drawn by :

G PUGH